


#3. **Directional Sign** – Undivided Multilane Highway 55 mph

Text size and arrow size come from Exhibit 3-4

Initial spacing from 2020 recommended spacing chart (10.7" text use 6" spacing)

**Initial Vertical Spacing**

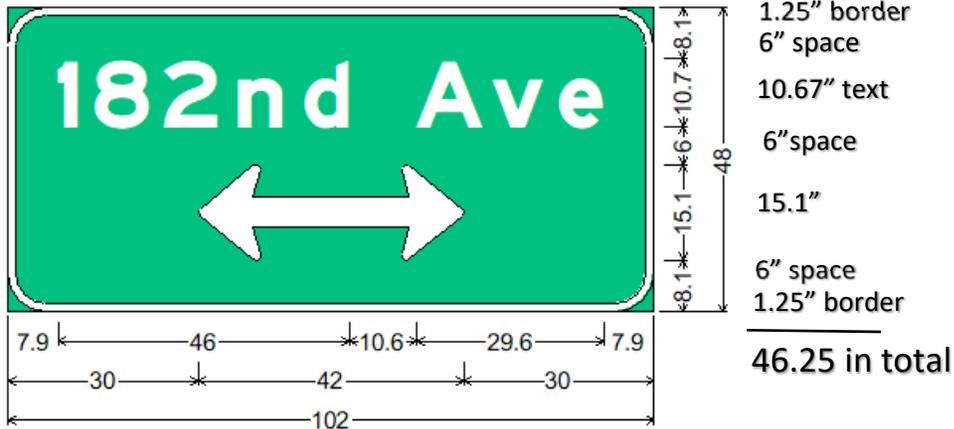

SignCad program rounds 46.25" up to next 6" increment of 48"

SignCad program puts extra 1.75" at top and bottom of panel

8.1" – 1.25" border = 6.85" which is less than 75% of 10.67" text size

Panel is acceptable as is.

Technician may choose to adjust extra 1.75" throughout the panel.

1.75" Divided into 3 vertical spaces = .583 per space

**Recommended Spacing for Objects in Signcad**


**2020**

Text Size (IN)	Recommended spacing (IN)	* for panels with only shield & arrows		
		Shield (IN)	text size in shield (IN)	Recommended spacing (IN)
20	12	36	15	9
16	10	24	10	6
15	9	18	7	4
13.333	8			
12	7.5			
10.667	6			
10	6			
8	5			
6	4			
4	3			

NOTES: Text size is Primary Designation Text, not ACTION MESSAGE text size  
Final object spacing must meet at least 50% of text size and should not exceed 75% of text size.

**Adjusted Vertical Spacing**

Add .58" to each vertical space

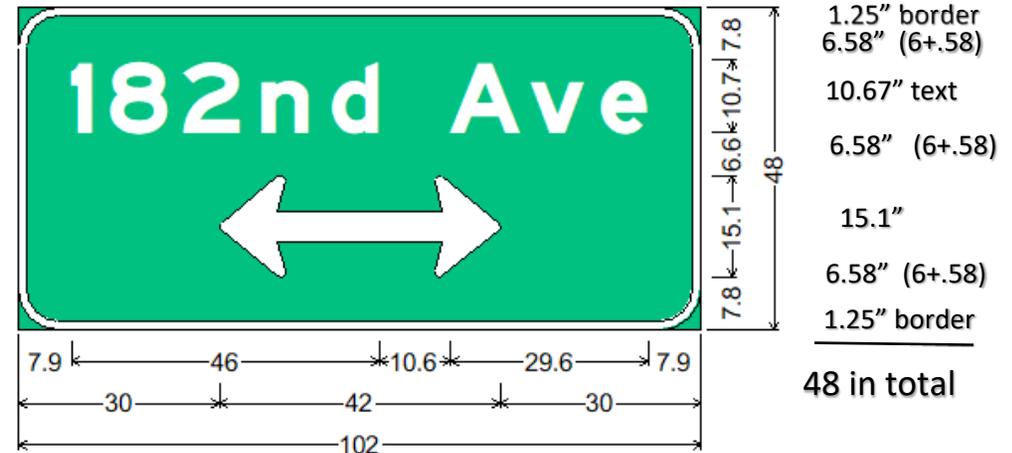

Horizontal Spacing on longest line of text to edge of panel should appriximatley match vertical spacing. Adjust as needed.